


Multi-Mount Instructions for Rafter Mount (#90231 - Pack of 8)

Attach to Rafter on a Composition Shingle Roof

Multi-Mount features a 9 x 11-IN black aluminum flashing with rounded corners and alignment notches. Includes 4-IN x 5/16-IN lag bolt with sealing washer.

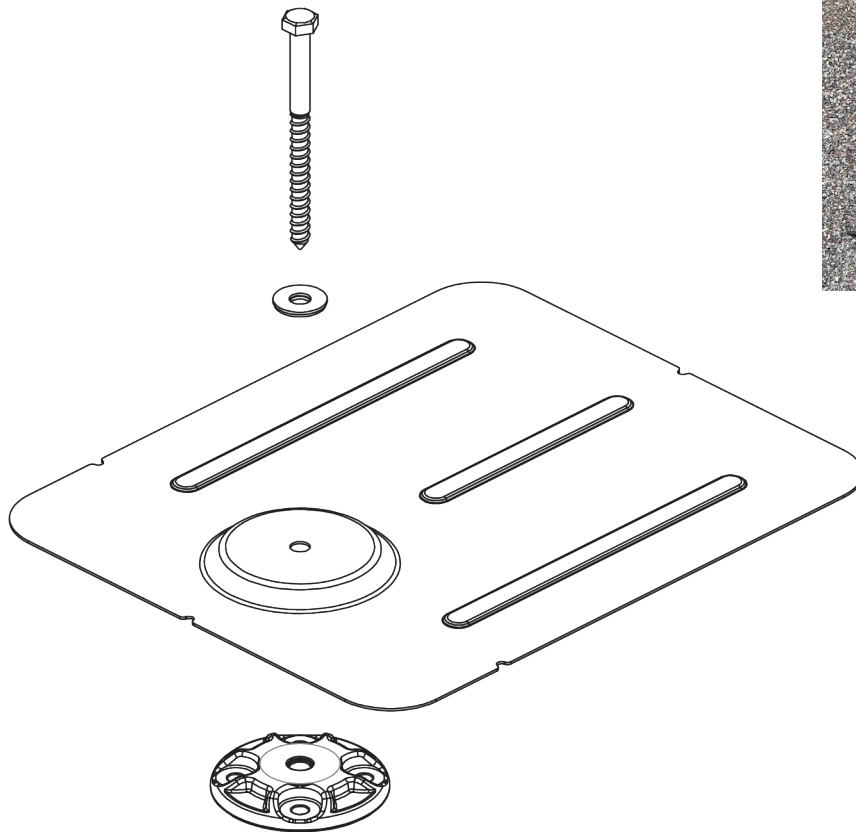

L-Foot mount is sold separately

Installation Instructions

Locate the mounting point on the roof approximately 3 inches below the edge of the shingle row above the mounting point. Mounting point should be over the center of a rafter. Use a roof bar to separate the shingles immediately above the mounting point.




Slide the flashing under the row of shingles until it hits the shingle nails. This will allow you to put the flashing in the optimal location.



Confirm rafter location with a 17/64-IN pilot bit and remove the flashing.



Apply sealant to the bottom of the puck. Use a sealant that is approved by the manufacturer of the roofing material. Place the puck on the shingle with the center hole over the pilot hole in the roof.

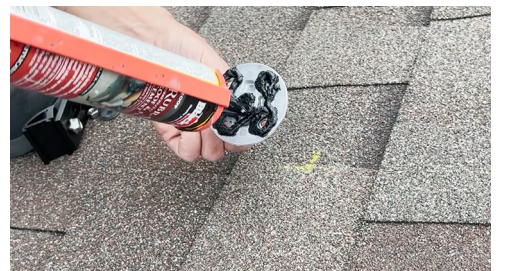

Position the flashing under the shingles in the row above and over the puck.



Finish the installation by installing the 5/16-IN lag bolt and sealing washer to hold the L-foot in place. Tighten until the sealing washer is just touching the L-foot. Final tightening should be done after the rails are installed to allow the L-foot to be moved slightly, if necessary.

